




Embedded Systems SIA, VAT No LV40003411103 47. Katolu str., Riga, LV 1003, LATVIA Phone: +371 67648888, fax: +371 67205036, e-mail: <u>sales@openrb.com</u>

LogicMachine5 Reactor IO V2

LogicMachine (LM) is your easiest way to program complex logic in KNX/EIB, Modbus, BACnet, EnOcean and other networks. LM will enable you to efficiently customize building automation processes, easily delivering unlimited flexibility benefit to end users in a costeffective way.

LM5-RIO2 is an embedded platform with integrated Ethernet, USB, KNX/EIB, Serial interfaces, EnOcean transceiver (optional) and I/O ports. LM allows to use it as crossstandard gateway, logic engine, visualization platform, IP Router. Scripting templates provides userfriendly, flexible configuration

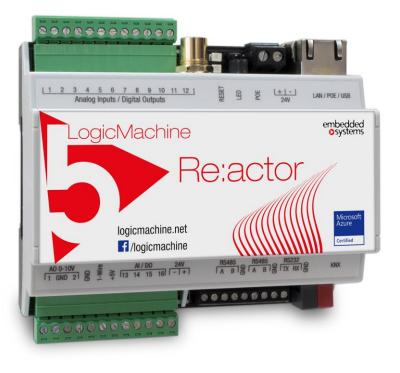

interface and integration with cloud/web services, 3rd party devices. Via applying custom scripts LM can simultaneously act as thermostat, security panel, lighting controller, etc. LogicMachine application store and external app development possibility allows to extend device functionality and adjust to a specific market segment.

LM5-RIO2 is optionally available with 3x more powerful CPU than all previous LogicMachine versions.

ENG - Data sheet Issue date 11.06.2017

Application

- Logical functions
- WEB SCADA visualization for PC and touch-devices
- cross-standard gateway
- integration with third party devices over USB, RS485 serial port, Ethernet AV, IR, HVAC
- Data logger with trends
- KNX IP Router
- Presence monitoring
- Lighting regulation
- Universal controller (lighting, shutter etc.)
- Health/activity monitoring
- Internet-of-Things
- Cloud server/client
- ...



Types of product

Types of product				
LogicMachine5 Reactor IO V2 LogicMachine5 Reactor IO V2 Power LogicMachine5 Reactor IO V2 EnOcean LogicMachine5 Reactor IO V2 EnOcean Power		LM5-RIO2 LM5p-RIO2 LM5-RIO2E LM5p-RIO2E		
Standards and norms compliance				
EMC: PCT	EN61000-6-1 EN61000-6-3 Certificate			
	certimette			
Technical data:				
Power supply:	2 x 24V DC on terminal connectors (1 for LM powering, 1 for			
	external relay powering) or			
	24V DC Passive Power-over-Ethernet			
Power consummation:	1.3W			
Interface:	KNX/EIB TP1		1	
	EnOcean 868	VH with		
	Antenna)TV	1	
	10BaseT/100BaseTX RS-485		1 1	
	RS-485/RS-23	2	1	
	(switchable in software – full-duplex=RS232, half-duplex=RS485) USB2.0		-	
			1	
	Analog input/	Digital output	16 (Configurable). 380 mA continues current on output. Optoislated from KNX/EIB bus. Additional 24V power source is supported.	
	Analog output	ts	2 (0-10V, 12bit resolution, 20mA max current)	
	1-Wire		1	
Connections:	KNX bus:		Bus Connection Terminal	
	Dowor cupply		0.8mm2 Scrow 1 Emm2	
	Power supply: Serial:		Screw, 1.5mm2 Screw, 1.0 mm2	
	I/O:		Screw, 1.5 mm2	
	1-wire		Screw, 1.5 mm2	


Operating elements	LED	1 – CPU load 1 - Activity
Enclosure:	Material: Color: Dimensions:	Polyamide Gray 61(W)x90(H)x108(L) mm
Usage temperature: Storage temperature: Weight: Warranty: Relative Humidity:	0C +45C -15C +55C 150g 2 years 1095 % without condensa	tion



The installation and assembly of electrical equipment may only be performed by skilled electrician. The devices must not be used in any relation with equipment that supports, directly or indirectly, human health or life or with application that can result danger of people, animals or real value

Electrical connection

The devices are constructed for the operation of protective low voltage (SELV). Grounding of device is not needed. When switching the power supply on or off, power surges must be avoided.

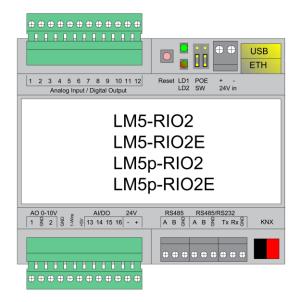

Terminal connection schemes


Powering over Ethernet

LM5 supports two powering modes:

- regular powering over screw terminals (Jumpers up or down)
- passive PoE powering over 24V DC (Jumpers down)



Please note that there are two PoE types of PoE switches/adapters – passive and active (802.3af). In passive mode 4 Ethernet cable wires are used for data and 4 are used for power. In active PoE mode data and power goes together.

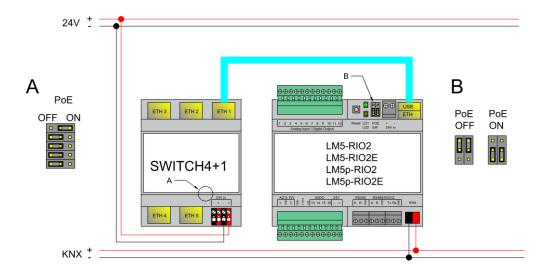


Passive PoE switch

Passive PoE adapters








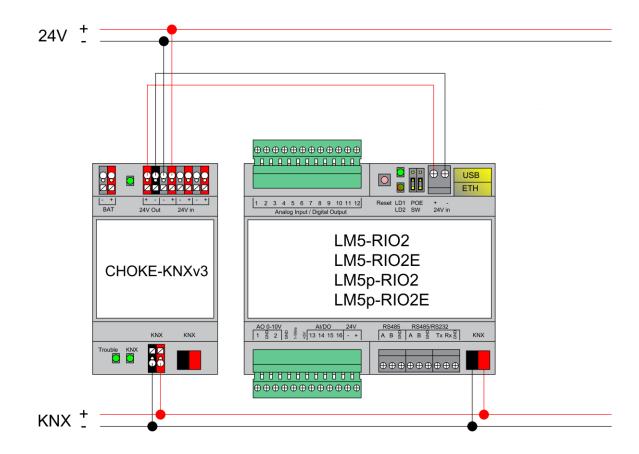

RS-485 connection

There can be used max two RS-485 on LM5. First one is definitive, second one is software switchable – either it works as RS-485 or as RS-232 :


- If it is set up as full-duplex it will operate as RS-232 and respective TX/RX/GND screw terminals should be used
- If it is set up as half-duplex (*) it will operate as RS-485 and respective A/B/GND screw terminals should be used

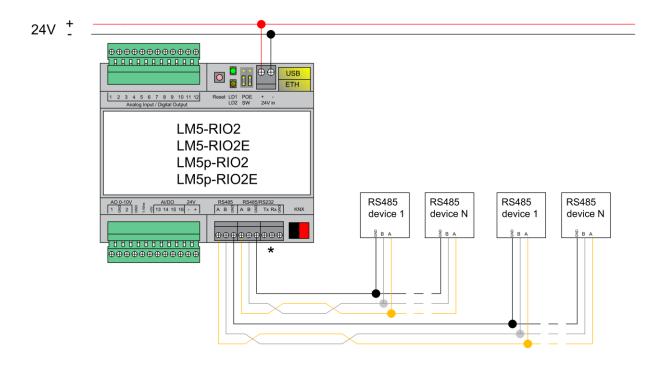

*RS-485 is chosen in this case, RS-232 is not activated


RS-485/RS-232 connection


If second serial port is set as full-duplex in LogicMachine configuration, it will operate as RS-232 and respective TX/RX/GND screw terminals should be used.

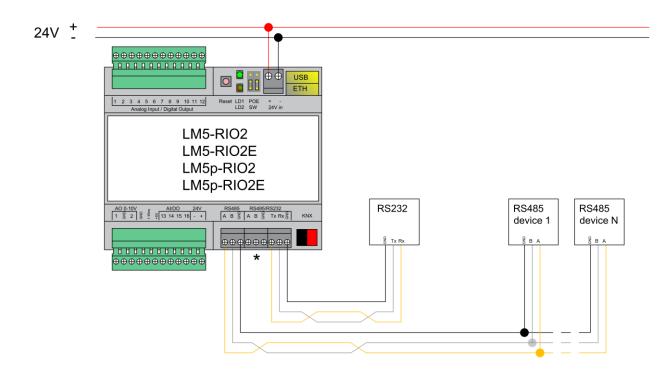


*RS-232 is chosen in this case, RS-485 is not activated


Digital output (e.g. relay/contactor)

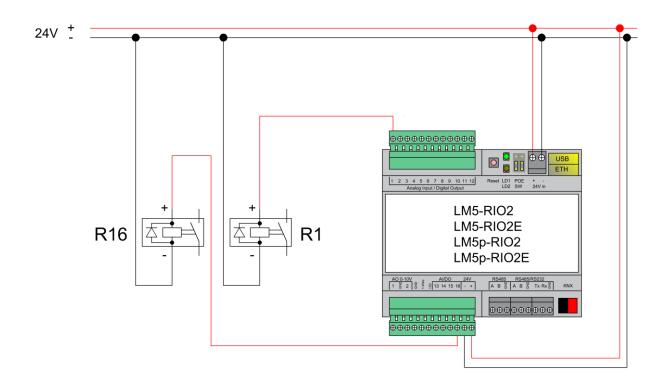

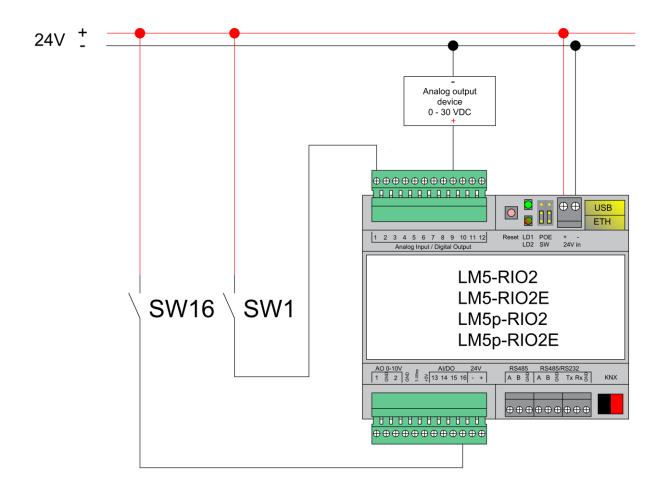

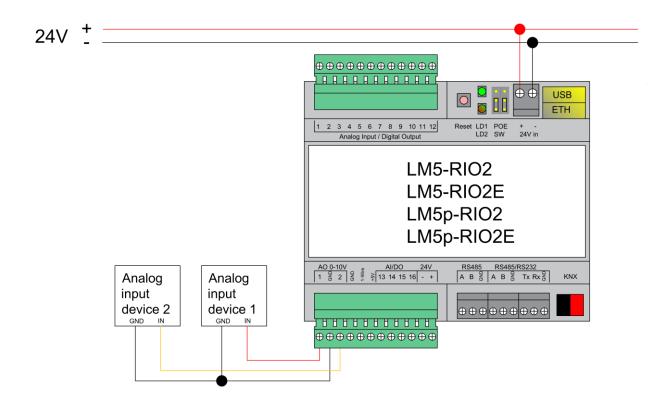

1-Wire connection

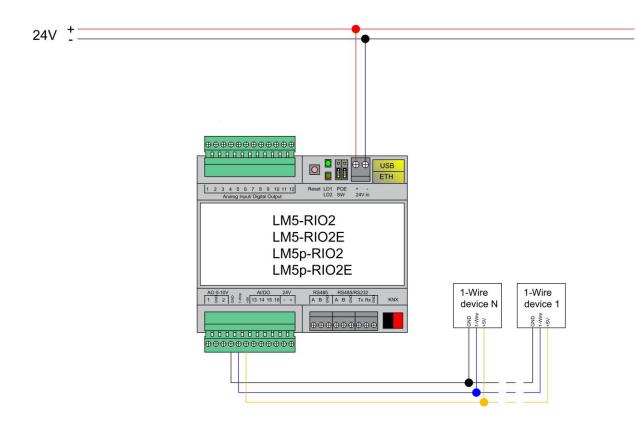

Quick startup guide

1) Mounting the device on DIN rail

2) Connect the KNX bus cable

3) Connect 24V power supply to the device (either through separate 24V crew terminals or

through Passive 24V DC Power-Over-Ethernet)

4) Connect Ethernet/LAN cable coming from the PC/switch

Default IP configuration

Login name	admin
Password	admin
IP address	192.168.0.10
Network mask	255.255.255.0

Reset device

You can either reboot the device by pressing RESET button or reset the configuration to factory defaults:

- Press and hold for <10 sec reboot the device
- *Press and hold for >10 sec* reset networking with IP to factory default
- Press and hold for >10 sec and again press and hold for >10 sec full reset of configuration to factory defaults